

Scalextric C4PBD Digital Track Set Instructions (4 Car Digital Powerbase)

***** Make sure your cars are digital! *****

Setting up the track

When setting up your Scalextric digital layout:

- 1.) Set the track for clockwise rotation.
- 2.) Each of the lane change track sections have sensors at one end of the track section. The lane change sections should have the sensors in front of the lane change, not behind (keeping in mind that the cars are going to run in clockwise rotation).
- 3.) Once you have the track sections together, plug the controllers into the ports on the 4 car digital power base.
- 4.) Now plug the power transformer into the right hand side of the 4 car digital power base. The green LED should light up letting you know that the track is powered up.

Programing cars

- 1.) Make sure that there are no cars on the track.
- 2.) Take the car that you want to program and place it on the track section that the 4 car digital power base is attached to.
- 3.) Each controller port has a button on the top of the power base (#1 #2 #3 #4).
- 4.) Place the car in the slot on the track. Push and hold the button down on the top of the power base which goes with your controller.
- 5.) The green light on the 4 car digital power base will flash two times. The car is now programmed to that controller.
- 6.) To confirm this, gently push the throttle trigger and the car should move.
- 7.) Repeat this procedure for the other cars keeping in mind that any time you program a car, all other cars must be removed from the track.

Note: If the car makes a humming noise and does not move, make sure it is a digital car and not just Digital Plug Ready.

Full instructions, from Scalextric, should be read in conjunction with this guide. Full instructions contain important safety information.

Safety Notes

This product is not suitable for children under 3 years because of small parts that can present a choking hazard Some components have functional sharp edges - handle with care.

This product is intended for indoor use only.

Do not use standard powerbases or standard power supplies in a sport digital layout as this will seriously damage the equipment.

The power supply transformer is not a toy. It is a "transformer for tovs". Before use, check that the transformer is the correct voltage for your mains electricity supply. The set is only to be used with the recommended transformer. The transformer should be examined regularly for damage to the casing, plug pins and cable. In the event of such damage, the set should not be used until the transformer is replaced with a Hornby recommended unit.

The set must not be connected to more than the recommended number of power supplies. The output terminals of the transformer must not be connected directly, or indirectly, to the output of any other circuit derived from a transformer or mains power supply

If the electric motor in the car becomes jammed, remove the car from the track and let it cool down. Do not touch the motor casing.

Before cleaning any part, disconnect the transformer from the mains electricity supply. Do not use liquid for cleaning.

Please retain these details for future reference

If in doubt, please ask

Battery Safety Guidelines

Used correctly, domestic batteries are a safe and dependable source of portable power. Problems can occur if they are misused or abused - resulting in leakage or, in extreme cases, fire or explosion

Please follow these simple guidelines to eliminate the possibility of such problems

Always take care to fit batteries correctly. Observe the plus and minus signs on the batteries and in the battery compartment.

Always replace the complete set of batteries at one time, taking care not to mix old and new batteries or batteries of different types

Always store unused batteries in their packaging and away from metal objects which may cause short-circuits

Always remove dead batteries from equipment. Remove batteries from equipment which you know will not be used for a long time. Otherwise the batteries may leak and cause damage.

Always supervise children if they are replacing batteries themselves to ensure these guidelines are followed

Always make sure that battery compartments are secure

Never dispose of batteries in a fire as this can cause them to explode

Never attempt to recharge ordinary batteries as this may cause fire or explosion.

Waste electrical products should not be disposed of with household waste

Please recycle where facilities exist. Check with your Local Authority or with us for recycling advice.